

#02, #62 & #90 Mates Bed Instructions

CONTAINERS

3002 TWIN TALL MATES BED

3062 TWIN MATES BED

3090 TWIN MATES BED

1 Box Twin HB/FB (Hardware: 8 - 30mm Bed Bolts and 8 Cap Nuts)


1 Box (2) Cleated Rails (Hardware: 3 - Bed Wires and 6 - 1" Bed Wire Screws)

TOOLS REQUIRED

HEX KEY (Provided)

ASSEMBLY INSTRUCTIONS

1. CHECK CARTONS TO BE SURE ALL WOODEN PARTS AND HARDWARE ARE INCLUDED.
2. TO BEGAIN ASSEMBLY, OBTAIN HEADBOARD, FOOTBOARD AND TWO CLEATED RAILS.
3. HOLD THE HB UPRIGHT AND INSERT 30mm BED BOLTS THROUGH METAL BRACKET ON RAIL AND PREDRILLED HOLES ON HB AND SECURE WITH CAP NUTS AS SHOWN IN FIG. #1.
4. REPEAT STEP 3 FOR THE OTHER SIDE.
5. ATTACH FB TO THE OTHER END USING SAME METHOD AS IN STEPS 3 & 4.

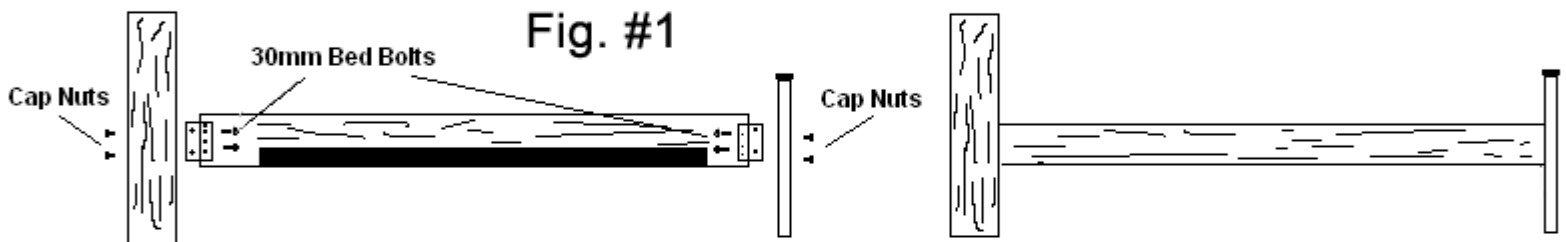

#3090



Shown with optional #3050 Roll-Out Storage Unit

#3062



Shown with optional #3960 Four-Drawer Under Bed Unit

#3002




**PINE
CRAFTER
FURNITURE**
"Quality Furniture At Reasonable Prices"


Made In USA