

#11, #11F, #12, #16 & #16F BUNK BED INSTRUCTIONS

CONTAINERS

3011 ONE PIECE TWIN BUNK BED (3 CARTONS TOTAL)

- 1 Box (2) HB/FB (Hardware: 24 – 30mm Bed Bolts, 24 – 17mm Cap Nuts & 1 – Hex Key)
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)

3011F ONE PIECE FULL BUNK BED (3 CARTONS TOTAL)

- 1 Box (2) FULL HB/FB (Hardware: 24 – 30mm Bed Bolts, 24 – 17mm Cap Nuts & 1 – Hex Key)
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Full Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (Hardware: 3 – Full Bed Wires and 6 – 1" Bed Wire Screws)

3012 TWO PIECE TWIN BUNK BED (3 CARTONS TOTAL)

- 1 Box (2) Top HB/FB (2) Bottom HB/FB (Hardware: 4 – Metal Pins, 24 – 30mm Bed Bolts, 24 – 17mm Cap Nuts and 1 – Hex Key)
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)

3016 TWIN/FULL BUNK BED (4 CARTONS TOTAL)

- 1 Box (2) Twin HB/FB (Hardware: 4 – Metal Pins, 16 – 30mm Bed Bolts and 16 – 17mm Cap Nuts)
- 1 Box (2) Full HB/FB (Hardware: 8 – 30mm Bed Bolts, 8 – 17mm Cap Nuts & 1 – Hex Key)
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (Hardware: 3 – Full Bed Wires and 6 – 1" Bed Wire Screws)

3016F FULL/FULL BUNK BED (4 CARTONS TOTAL)

- 1 Box (2) Top Full HB/FB (Hardware: 4 – Metal Pins, 16 – 30mm Bed Bolts and 16 – 17mm Cap Nuts)
- 1 Box (2) Bottom Full HB/FB (Hardware: 8 – 30mm Bed Bolts, 8 – 17mm Cap Nuts & 1 – Hex Key)
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Full Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (Hardware: 3 – Full Bed Wires and 6 – 1" Bed Wire Screws)

TOOLS REQUIRED

PHILLIPS SCREWDRIVER

HEX KEY (Provided)

BUNK BED ASSEMBLY INSTRUCTIONS

1. CHECK CARTONS TO BE SURE ALL WOODEN PARTS AND HARDWARE ARE INCLUDED.
2. TO BEGAIN ASSEMBLY, OBTAIN ONE TOP HB/FB AND TWO CLEATED RAILS.
3. HOLD THE HB UPRIGHT AND INSERT 30mm BED BOLTS THROUGH METAL BRACKET AND BOTTOM HOLES ON HB/FB AND SECURE WITH CAP NUTS (AS SHOWN IN FIG. #1).
4. REPEAT STEP 3 FOR THE OTHER SIDE.
5. ATTACH ANOTHER HB/FB TO THE OTHER END USING SAME METHOD AS IN STEPS 3 & 4.
6. OBTAIN ONE GUARD RAIL AND ASSEMBLE TO THE TOP HOLES IN THE UPPER BUNK HEADBOARD IN THE SAME MANNER AS IN STEP 3. REPEAT THIS FOR THE OTHER SIDE.
7. REPEAT STEP 6 FOR OTHER GUARD RAIL.
8. ATTACH BED WIRES TO BOTH ENDS OF RAILS AS SHOWN ON TOP OF WOODEN CLEAT APPROXIMATELY 12" FROM END OF RAIL AND CENTER OF RAIL BY USING 1" BED WIRE SCREWS.
9. TO ASSEMBLE THE LOWER BED REPEAT STEPS 2,3,4,5 AND 8.
10. IF YOUR STYLE BED IS A STACKABLE BED, FIND THE METAL BED PINS AND INSERT INTO THE PRE-DRILLED HOLES IN THE TOP OF EACH LEG OF THE LOWER BUNK AS SHOWN IN FIG. #1.
11. YOU MAY NOW STACK THE BEDS. DO NOT LEAVE THE UPPER BUNK UNATTACHED, EVEN IF IT ISN'T USED FOR A SLEEPING AREA. IT MAY BE DISLODGED AND FALL RESULTING IN SERIOUS INJURY OR DEATH.

RECOMMENED MATTRESS SIZE

TWIN BED IS DESIGNED TO USE MATTRESSES AND FOUNDATIONS 37-1/2" X 74-1/2" -- FULL BED 54-1/2" X 74-1/2" (+ OR - 1/2"). THE TOTAL THICKNESS OF BOTH MATTRESS AND FOUNDATION MUST NOT EXCEED 7" FOR TOP BUNK.


NOTE: THERE MUST BE AT LEAST 5" FROM MATTRESS SLEEPING SURFACE TO TOP EDGE OF GUARD RAILS.

SAFETY WARNINGS

1. FOLLOW INFORMATION ON THE WARNING LABEL ATTACHED TO THE UPPER BUNK BED STRUCTURE. DO NOT REMOVE LABEL.
2. DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE UPPER BUNK.
3. DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
4. ALWAYS USE THE LADDER END FOR ENTERING AND EXITING THE UPPER BUNK.
5. ALWAYS USE GUARD RAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
6. THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
7. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCES



Fig. #1

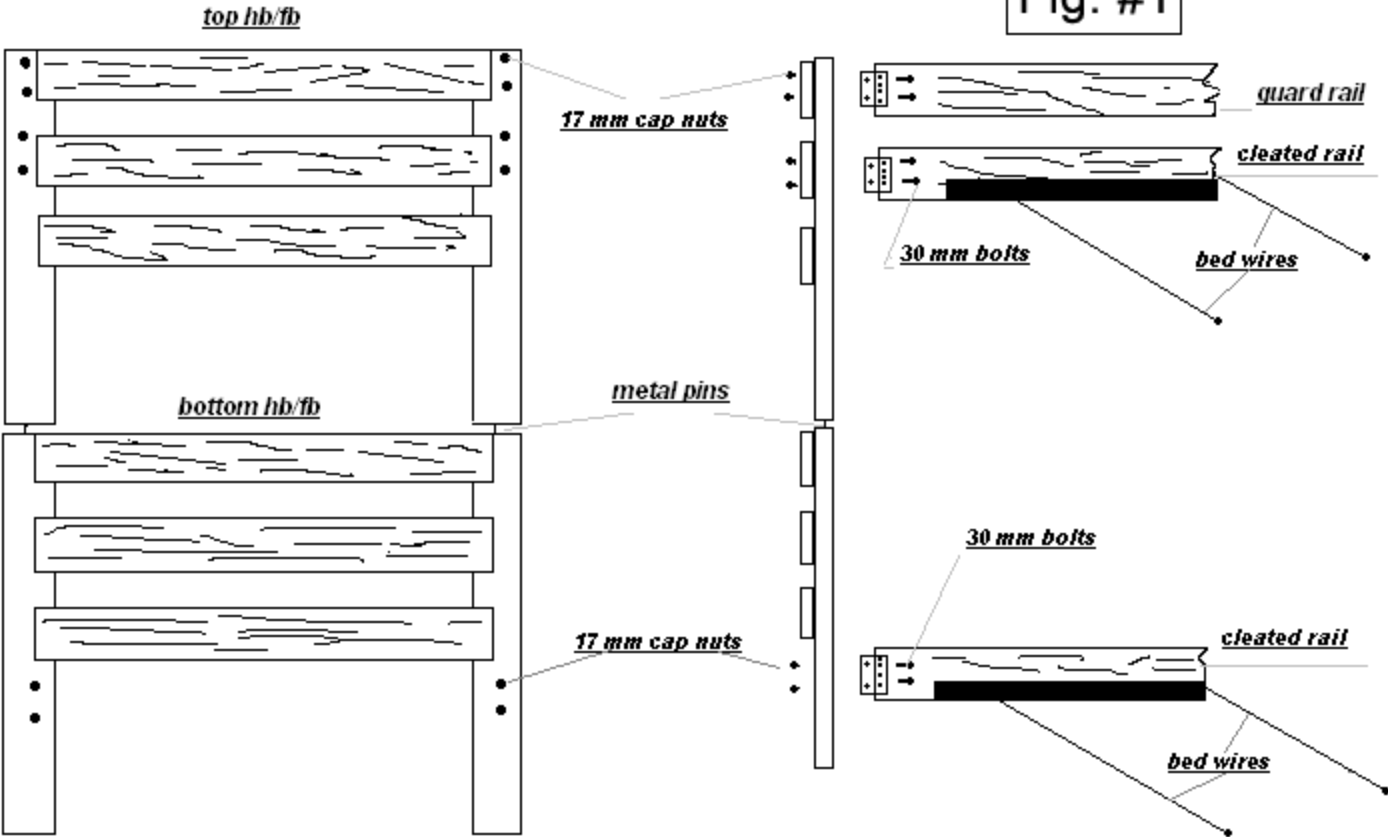

#3011 & #3011F

#3012



#3016

#3016F

