

## **#14, #14T, #14F & #14TF BUNK BED INSTRUCTIONS**

### **CONTAINERS**

#### **# 3014 TWIN BUNK BED w/SIX-DRAWER UNDER BED UNIT (6 CARTONS TOTAL)**

- 1 Box (2) Top HB/FB (Hardware: 4 – Metal Pins, 16 – 30mm Bed Bolts and 16 – Wire Nuts)
- 1 Box (2) Bottom HB/FB (Hardware: 8 – 30mm Bed Bolts and 8 – Wire Nuts)
- 1 Box (1) Ladder (Hardware: 4- 1-3/4" Wood Screws)
- 1 Box (1) Six-Drawer Under Bed Unit
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)

#### **# 3014T TWIN BUNK BED w/TRUNDLE UNIT (6 CARTONS TOTAL)**

- 1 Box (2) Top HB/FB (Hardware: 4 – Metal Pins, 16 – 30mm Bed Bolts and 16 – Wire Nuts)
- 1 Box (2) Bottom HB/FB (Hardware: 8 – 30mm Bed Bolts and 8 – Wire Nuts)
- 1 Box (1) Ladder (Hardware: 4- 1-3/4" Wood Screws)
- 1 Box (1) Trundle Unit
- 1 Box (2) Cleated Rails (2) Guard Rails (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)
- 1 Box (2) Cleated Rails (1) Support Rail (Hardware: 3 – Twin Bed Wires, 6 – 1" Bed Wire Screws, 4 – L- Brackets and 8 – 3/4" Wood Screws)

### **TOOLS REQUIRED**

PHILLIPS SCREWDRIVER

HEX KEY (Provided)

### **BUNK BED ASSEMBLY INSTRUCTIONS**

1. CHECK CARTONS TO BE SURE ALL WOODEN PARTS AND HARDWARE ARE INCLUDED.
2. TO BEGAIN ASSEMBLY, OBTAIN ONE TOP HB/FB AND TWO CLEATED RAILS.
3. HOLD THE HB/FB UPRIGHT, INSERT 30mm BED BOLTS THROUGH METAL BRACKET AND BOTTOM HOLES ON TOP HB/FB AND SECURE WITH CAP NUTS (AS SHOWN IN FIG. #1).
4. REPEAT STEP 3 FOR THE OTHER SIDE.
5. ATTACH ANOTHER TOP HB/FB TO THE OTHER END USING SAME METHOD AS IN STEPS 3 & 4.
6. OBTAIN ONE GUARD RAIL AND ASSEMBLE TO THE TOP HOLES IN THE TOP HEADBOARD IN THE SAME MANNER AS IN STEP 3. REPEAT THIS FOR THE OTHER SIDE.
7. REPEAT STEP 6 FOR OTHER RAIL.
8. ATTACH BED WIRES TO BOTH ENDS OF RAILS ON TOP OF WOODEN CLEAT APPROXIMATELY 12" FROM END OF RAILS AND CENTER OF RAIL BY USING 1" BED WIRE SCREWS.
9. TO ASSEMBLE THE BOTTOM BED REPEAT STEPS 2,3,4,5 AND 8.
10. CONNECT THE SUPPORT RAIL TO THE BACK SIDE OF THE BOTTOM HB/FB BY USING THE L-BRACKETS AS SHOWN IN FIG. #1.
11. IF YOUR BED CONTAINS THE SIX-DRAWER UNIT, THEN SLIDE THE UNIT BENEATH THE CLEATED RAILS AND BETWEEN BOTTOM HB/FB OF BOTTOM BUNK. CONNECT SIX-DRAWER UNIT TO INSIDE OF HB AND FB BY SECURING PRESET 2" WOOD SCREWS THROUGH SIDE BOARDS OF SIX-DRWAER UNIT. SCREWS CAN BE LOCATED BY REMOVING TOP LEFT AND RIGHT DRAWERS OF UNIT.
12. FIND METAL PINS AND INSERT INTO THE PRE-DRILLED HOLES IN THE TOP OF EACH BOTTOM HB/FB AS SHOWN IN FIG. #1
13. YOU MAY NOW STACK THE BEDS. DO NOT LEAVE THE UPPER BUNK UNATTACHED, EVEN IF IT ISN'T USED FOR A SLEEPING AREA. IT MAY BE DISLODGED AND FALL RESULTING IN SERIOUS INJURY OR DEATH.
14. CONNECT LADDER TO SIDE OF TOP AND BOTTOM HB/FB BY SECURING FOUR 1-3/4" WOOD SCREWS THROUGH PREDRILLED HOLES IN WOODEN PLATES ON BACK OF LADDER AS SHOWN IN FIG. #2.


### **RECOMMENED MATTRESS SIZE**

THIS BED IS DESIGNED TO USE MATTRESSES AND FOUNDATIONS 37-1/2" X 74-1/2"(+ OR - 1/2"). THE TOTAL THICKNESS OF BOTH MATTRESS AND FOUNDATION MUST NOT EXCEED 7" FOR TOP BUNK.


**NOTE:** THERE MUST BE AT LEAST 5" FROM MATTRESS SLEEPING SURFACE TO TOP EDGE OF GUARD RAILS.

### **SAFETY WARNINGS**

1. FOLLOW INFORMATION ON THE WARNING LABEL ATTACHED TO THE UPPER BUNK BED STRUCTURE. DO NOT REMOVE LABEL.
2. DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE UPPER BUNK.
3. DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
4. ALWAYS USE THE LADDER FOR ENTERING AND EXITING THE UPPER BUNK.
5. ALWAYS USE GUARD RAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
6. THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
7. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCES.

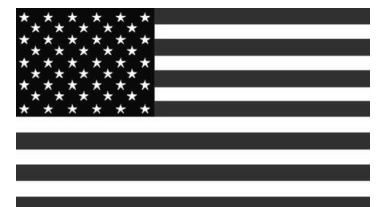

**MADE IN THE USA**

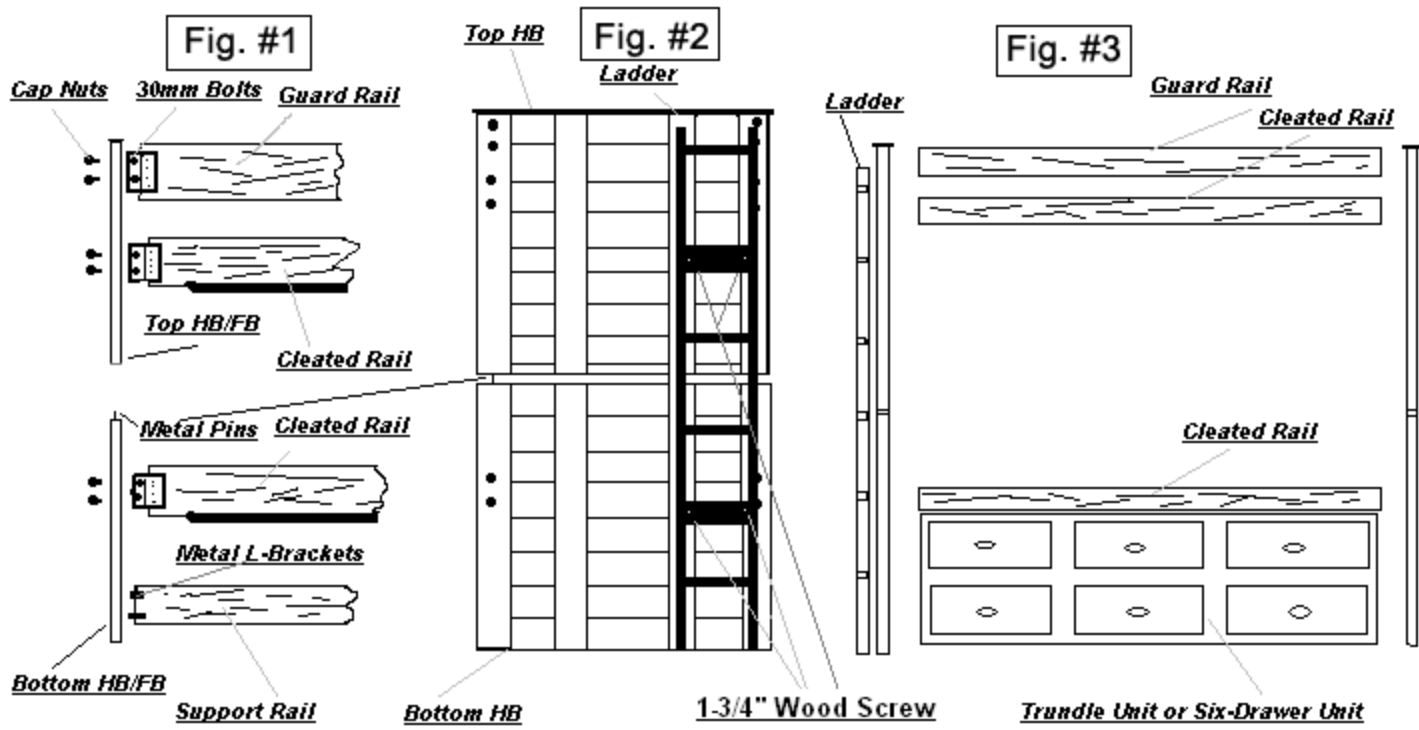

#3014T

