

**#32, #33, #34, #92, #93 & #94 CANNONBALL POST INSTRUCTIONS**

**CONTAINERS**

**# 3032 TWIN CANNONBALL PANEL POST BED (2 CARTONS TOTAL)**

1 Box Twin HB/FB (Hardware: 8 – 90mm Bed Bolts and 8 – Weld Nuts)  
1 Box (2) Cleated Rails

**# 3033 FULL CANNONBALL PANEL POST BED (2 CARTONS TOTAL)**

1 Box Full HB/FB (Hardware: 8 – 90mm Bed Bolts and 8 – Weld Nuts)  
1 Box (2) Cleated Rails

**# 3034 QUEEN CANNONBALL PANEL POST BED (2 CARTONS TOTAL)**

1 Box Queen HB/FB (Hardware: 8 – 90mm Bed Bolts and 8 – Weld Nuts)  
1 Box (2) Cleated Rails

**# 3092 TWIN CANNONBALL SPINDLE POST BED (2 CARTONS TOTAL)**

1 Box Twin HB/FB (Hardware: 8 – 90mm Bed Bolts and 8 – Weld Nuts)  
1 Box (2) Cleated Rails

**# 3093 FULL CANNONBALL SPINDLE POST BED (2 CARTONS TOTAL)**

1 Box Full HB/FB (Hardware: 8 – 90mm Bed Bolts and 8 – Weld Nuts)  
1 Box (2) Cleated Rails

**# 3094 QUEEN CANNONBALL SPINDLE POST BED (2 CARTONS TOTAL)**

1 Box Queen HB/FB (Hardware: 8 – 90mm Bed Bolts and 8 – Weld Nuts)  
1 Box (2) Cleated Rails

**TOOLS REQUIRED**


HEX KEY (Provided)

**ASSEMBLY INSTRUCTIONS**

1. CHECK CARTONS TO BE SURE ALL WOODEN PARTS AND HARDWARE ARE INCLUDED.
2. TO BEGAIN ASSEMBLY, OBTAIN HEADBOARD, FOOTBOARD AND TWO CLEATED RAILS.
3. HOLD THE HB UPRIGHT AND INSERT 90mm BED BOLTS THROUGH PREDRILLED HOLES ON HB AND METAL BRACKET ON RAIL AND SECURE WITH WELD NUTS AS SHOWN IN FIG. #1.
4. REPEAT STEP 3 FOR THE OTHER SIDE.
5. ATTACH FB TO THE OTHER END USING SAME METHOD AS IN STEPS 3 & 4.



Fig. #1

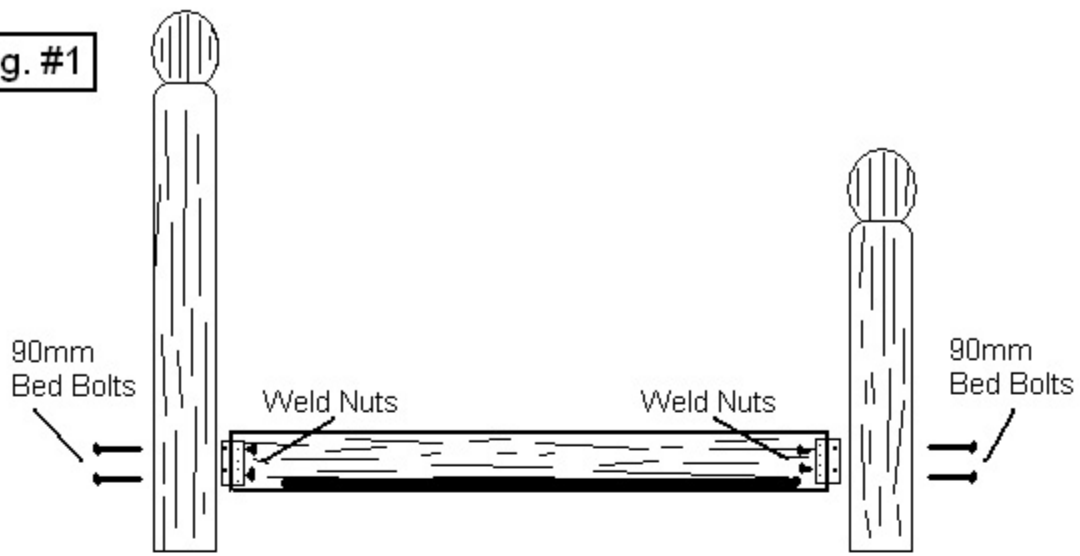

#3093



#3032

