

#71T JR LOFT BED INSTRUCTIONS

JR LOFT CONTAINERS

- 1 BOX (2) HB/FB (Hardware: 20 – 30mm Bed Bolts, 20 – Cap Nuts, 1 – Hex Key & 4 - 1 ¼" Wood Screws)
- 1 BOX (1) FOUR-DRAWER UNIT
- 1 BOX (1) TRUNDLE UNIT or SIX-DRAWER UNIT
- 1 BOX (1) LADDER (Hardware: 4 – 1-3/4" Wood Screws)
- 1 BOX (2) CLEATED RAILS (2) GUARD RAILS (Hardware: 3 – Twin Bed Wires and 6 – 1" Bed Wire Screws)
- 1 BOX (1) SUPPORT RAIL

ASSEMBLY TOOLS REQUIRED

- PHILLIPS SCREWDRIVER
- HEX KEY (Provided)

ASSEMBLY INSTRUCTIONS

1. CHECK CARTONS TO BE SURE ALL WOODEN PARTS AND HARDWARE ARE INCLUDED.
 2. TO BEGIN ASSEMBLY, OBTAIN ONE HB/FB AND TWO TOP GUARD RAILS.
 3. HOLD THE HB/FB UPRIGHT, INSERT 30mm BED BOLTS THROUGH METAL BRACKET OF TOP GUARD RAIL AND TOP HOLES ON HB/FB AND SECURE WITH CAP NUTS.
 4. REPEAT STEP 3 FOR THE OTHER SIDE.
 5. ATTACH ANOTHER HB/FB TO THE OTHER END USING SAME METHOD AS IN STEPS 3 & 4.
 6. OBTAIN ONE CLEATED RAIL AND ASSEMBLE TO THE CENTER HOLE IN THE UPPER BUNK HEADBOARD IN THE SAME MANNER AS IN STEP 3. REPEAT THIS FOR THE OTHER SIDE.
 7. REPEAT STEP 6 FOR OTHER RAIL.
 8. ATTACH BED WIRES TO BOTH ENDS OF RAILS ON TOP OF WOODEN CLEAT APPROXIMATELY 12" FROM END AND CENTER OF RAIL BY USING 1" BED WIRE SCREWS.
 9. TO ASSEMBLE THE BOTTOM SUPPORT RAIL REPEAT STEPS 6 AND 7.
 10. NOW LOCATE FOUR-DRAWER UNIT AND REST UNIT ON BOTTOM SUPPORT RAIL BELOW CLEATED RAIL. SECURE FOUR-DRAWER UNIT USING 1 ¼" WOOD SCREWS THROUGH SIDE PANEL OF UNIT AND SCREWING INTO THICK PART OF EACH HEADBOARD AND FOOTBOARD AS SHOWN IN Fig.#1. USE TWO SCREWS FOR EACH SIDE.
- NOTE LOCATION OF SCREWS.**
11. NOW SLIDE THE TRUNDLE UNIT UNDERNEATH SUPPORT RAIL.
 12. ATTACH LADDER TO SIDE OF HB/FB USING 1-3/4" WOOD SCREWS THROUGH PREDRILLED HOLES IN WOODEN PLATES ON LADDER AS SHOWN.

RECOMMENED MATTRESS SIZE

THIS BED IS DESIGNED TO USE MATTRESSES AND FOUNDATIONS 37-1/2" X 74-1/2" (+ OR - 1/2"). THE TOTAL THICKNESS OF BOTH MATTRESS AND FOUNDATION MUST NOT EXCEED 7" FOR TOP BUNK.

NOTE: THERE MUST BE AT LEAST 5" FROM MATTRESS SLEPPING SURFACE TO TOP EDGE OF GUARD RAILS.


SAFETY WARNINGS

1. FOLLOW THE INFORMATION ON THE WARNING LABEL ATTACHED TO THE UPPER BUNK BED STRUCTURE. DO NOT REMOVE THIS LABEL.
2. DO NOT ALLOW CHILDREN UNDER 6 YEARS OF AGE TO USE UPPER BUNK.
3. DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
4. ALWAYS USE THE LADDER FOR ENTERING AND EXITING THE UPPER BUNK.
5. ALWAYS USE GUARD RAILS ON BOTH LONG SIDES OF THE UPPER BUNK.
6. THE USE OF WATER OR SLEEP FLOTATION MATTRESSES IS PROHIBITED.
7. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCES.




MADE IN THE USA

Front View of Loft Bed

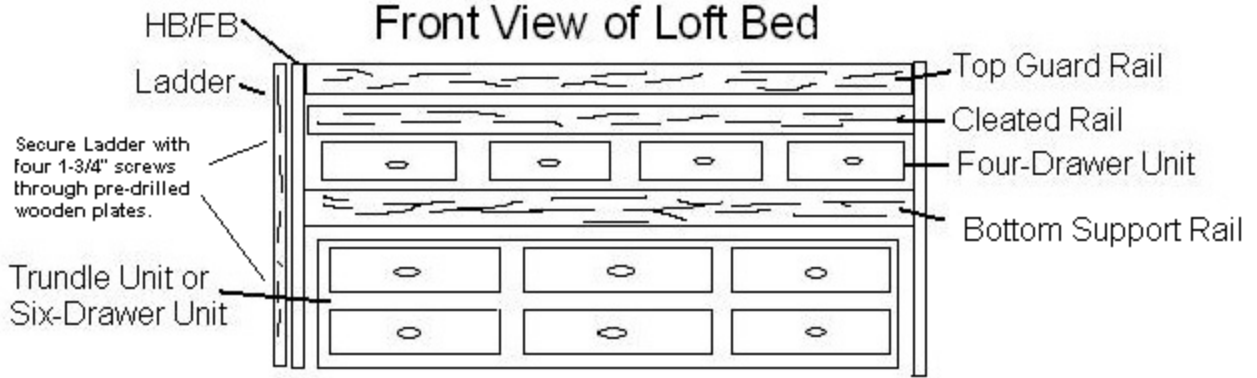

Top View of Loft Bed

Fig. #1

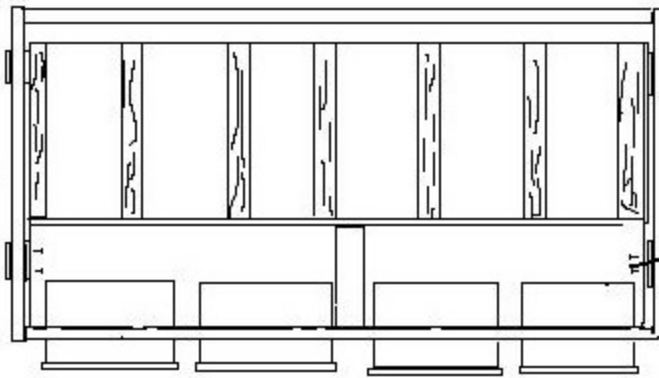

#3071T

