

## #82 & #83 MATES BED INSTRUCTIONS

### CONTAINERS

#### # 3082 TWIN MATES BED (2 CARTONS TOTAL)

1 Box Twin HB/FB (Hardware: 8 – 80mm Bed Bolts and 8 – Weld Nuts)

1 Box (2) Cleated Rails (Hardware: 3 – Bed Wires and 6 – 1" Bed Wire Screws)

#### # 3083 FULL MATES BED (2 CARTONS TOTAL)

1 Box Full HB/FB (Hardware: 8 – 80mm Bed Bolts and 8 – Weld Nuts)

1 Box (2) Cleated Rails (Hardware: 3 – Bed Wires and 6 – 1" Bed Wire Screws)



### TOOLS REQUIRED

HEX KEY (Provided)

### ASSEMBLY INSTRUCTIONS

1. CHECK CARTONS TO BE SURE ALL WOODEN PARTS AND HARDWARE ARE INCLUDED.
2. TO BEGAIN ASSEMBLY, OBTAIN HEADBOARD, FOOTBOARD AND TWO CLEATED RAILS.
3. HOLD THE HB UPRIGHT AND INSERT 80mm BED BOLTS THROUGH METAL BRACKET ON RAIL AND PREDRILLED HOLES ON HB AND SECURE WITH WELD NUTS AS SHOWN IN FIG. #1.
4. REPEAT STEP 3 FOR THE OTHER SIDE.
5. ATTACH FB TO THE OTHER END USING SAME METHOD AS IN STEPS 3 & 4.

Fig. #1

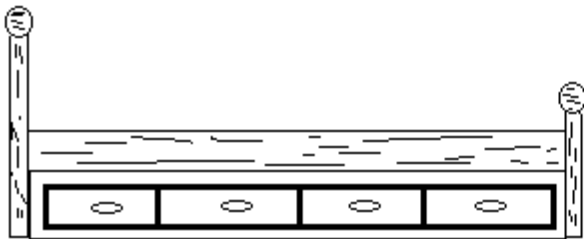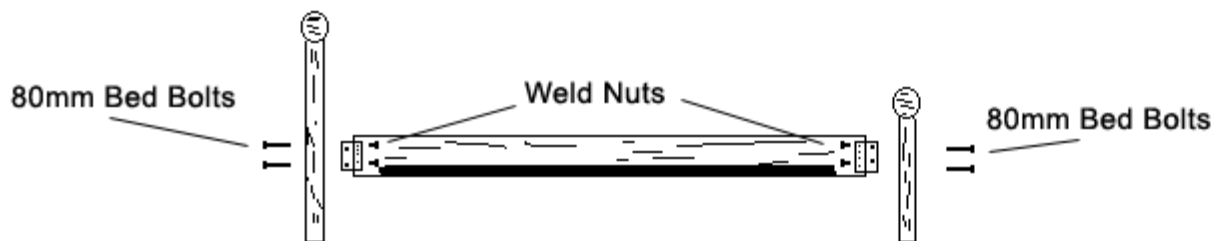

#3082



Shown with optional #3060 Four-Drawer Under Bed Unit