



## TAG-II Install Ford 7.3L 94-97

The TAG-II is two Turbo Air Guides one in the inlet to the turbo and a larger one which is in the air filter hose at the connection to the CCV.

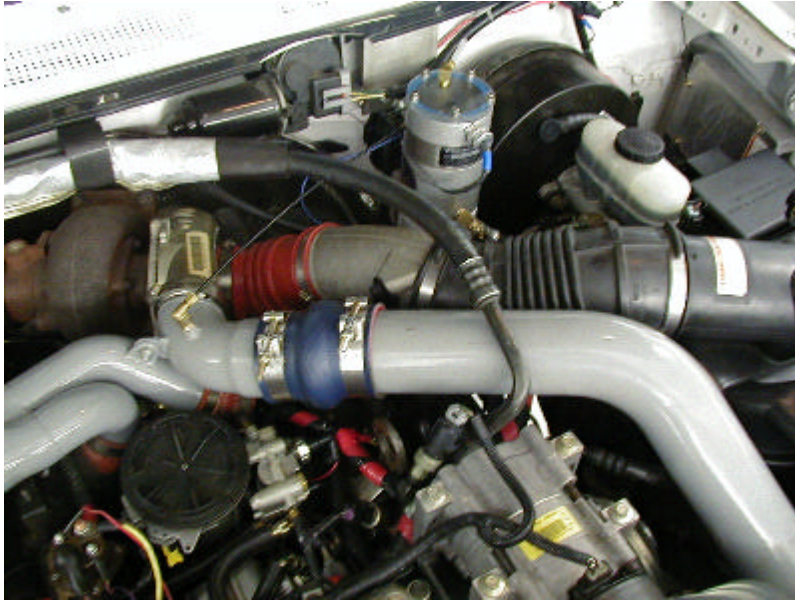


Remove the black 4" hose from the air filter housing to the CCV mounted to the valve cover. Then loosen the hose clamps from the red tapered hose leading from the CCV connector to the turbo inlet. Remove the two bolts which hold the CCV connector to the valve cover and remove the tapered hose and CCV connector from the truck.

Inspect the edges of the Turbo Air Guide for burrs and loose pieces. Even though these parts are cleaned and deburred before shipping you still want to make sure there are no loose pieces which could come loose and be drawn into the turbo. Be sure to wear gloves to protect your hands as some edges may be sharp.

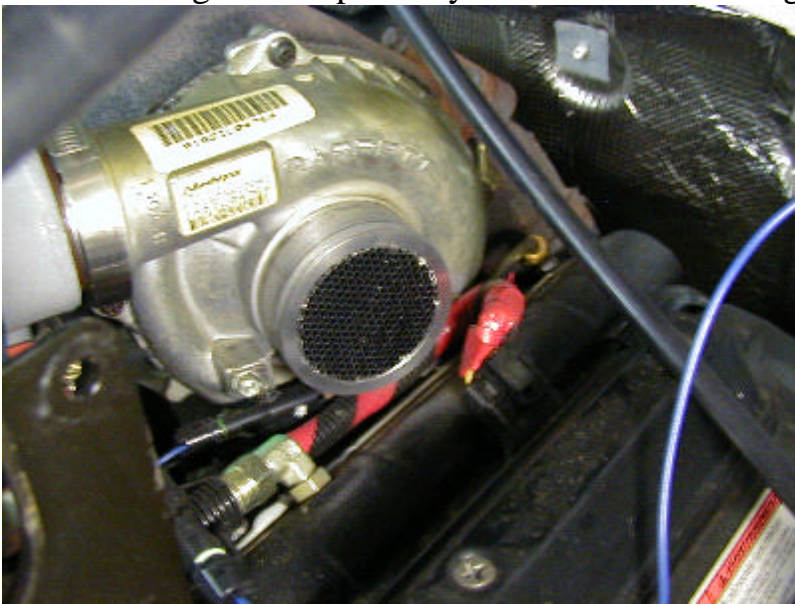


Install the small TAG into the turbo inlet as shown in the picture and reinstall the red hose with CCV intake. Reinstall the bolts for the CCV and tighten the clamp on the red hose to the turbo inlet.

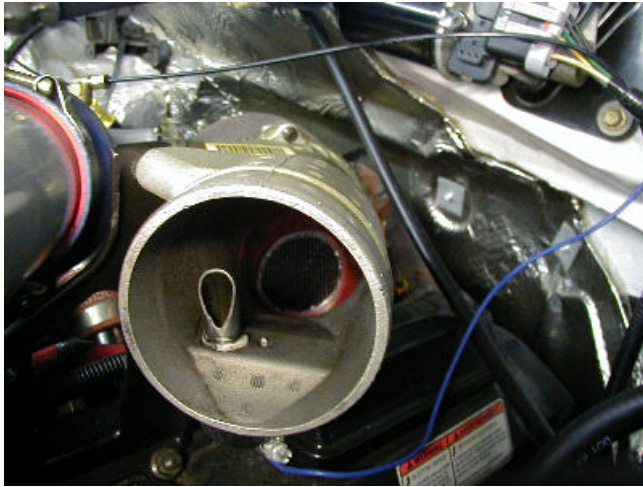

This photo shows the TAG installed in the turbo with the CCV



Next insert the larger TAG into the air intake hose that connects to the CCV with the flat side of the flange facing the CCV as shown in the photo to the left. Now reinstall this hose between the CCV and air box

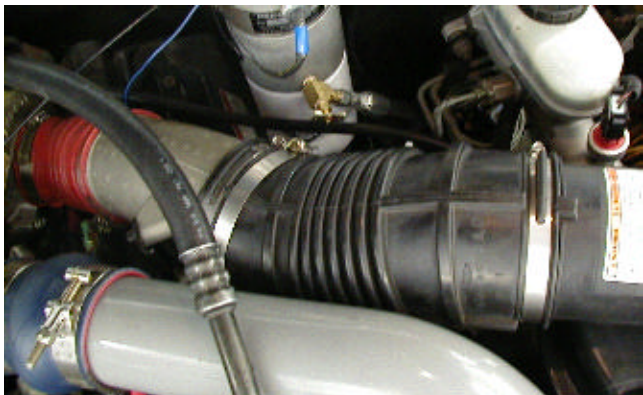

Install the supplied hose clamp snugly around the hose at the CCV connection as shown to help secure the TAG in place as shown in the photo. NOTE: Do not over tighten this hose clamp, it only needs to be snug to ensure the TAG is secured in place.

The TAG is so new, no claims are made for performance or mileage increases as results will vary with modifications and configuration of different vehicles. No warranty is given or implied and any damages resulting from the use of this product are strictly the responsibility of the user.