

## #62, #62F, #90, #90F

### CARTON CONTAINERS

#### #62, #62F, #90, #90F

- 1 Box HB/FB (Hardware: 8 – 30mm Bed Bolts and 8 – Cap Nuts)
- 1 Box (2) Cleated Rails (Hardware: 3 – Bed Wires and 6 – Bed Wire Screws)




### TOOLS REQUIRED




- Phillips Screwdriver or Electric Drill
- Hex Key (Provided)

### #62, #62F, #90, #90F ASSEMBLY INSTRUCTIONS

1. Check cartons to be sure all wooden parts and hardware is included.
2. To begin assembly, obtain headboard, footboard and two cleated rails.
3. Hold to HB upright and insert bed bolts through metal bracket on one rail and
4. continue through predrilled holes in HB. Secure with cap nuts as shown in Figure 2.
5. Repeat step 3 for the other rail.
6. Attach footboard to other end using same method as in steps 3 & 4.
7. Secure bed wires with bed wire screws to top of cleated rails as show in Figure 3.

#### Hardware – (Actual Size not Shown)

		
<b>Hex Key</b>	<b>30mm Bed Bolt and Cap Nut</b>	<b>Bed Wire and 1" Screw</b>
#62, 62F = 1 #90, 90F = 1	#62, 62F = 8 #90, 90F = 8	#62, 62F = 3 #90, 90F = 3

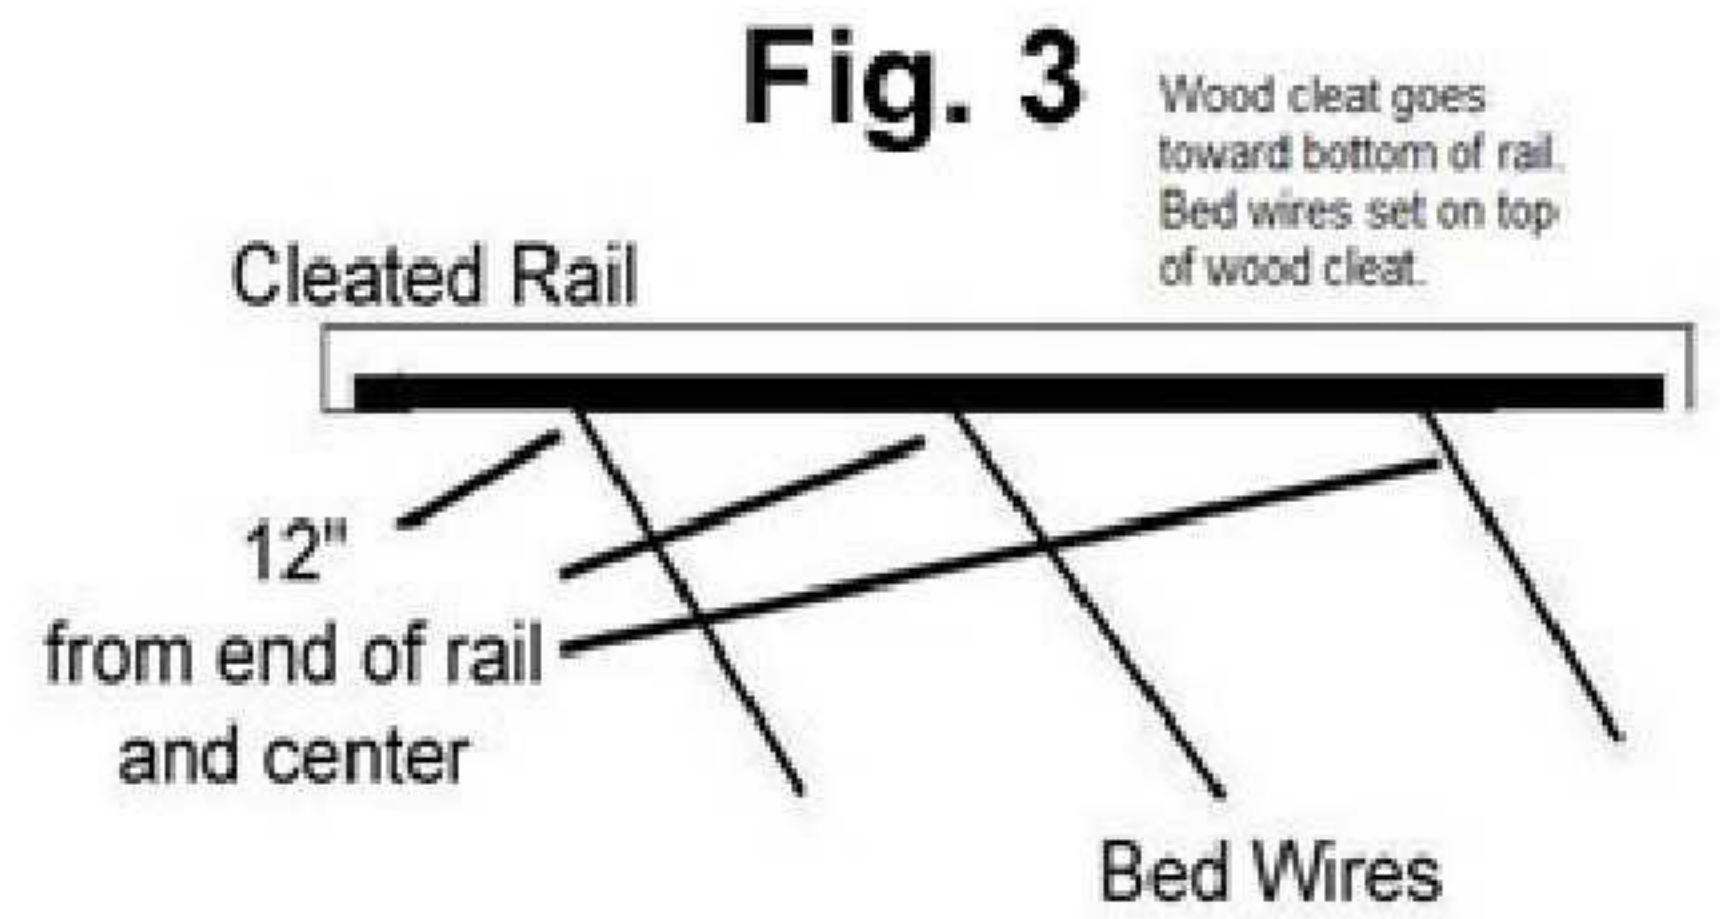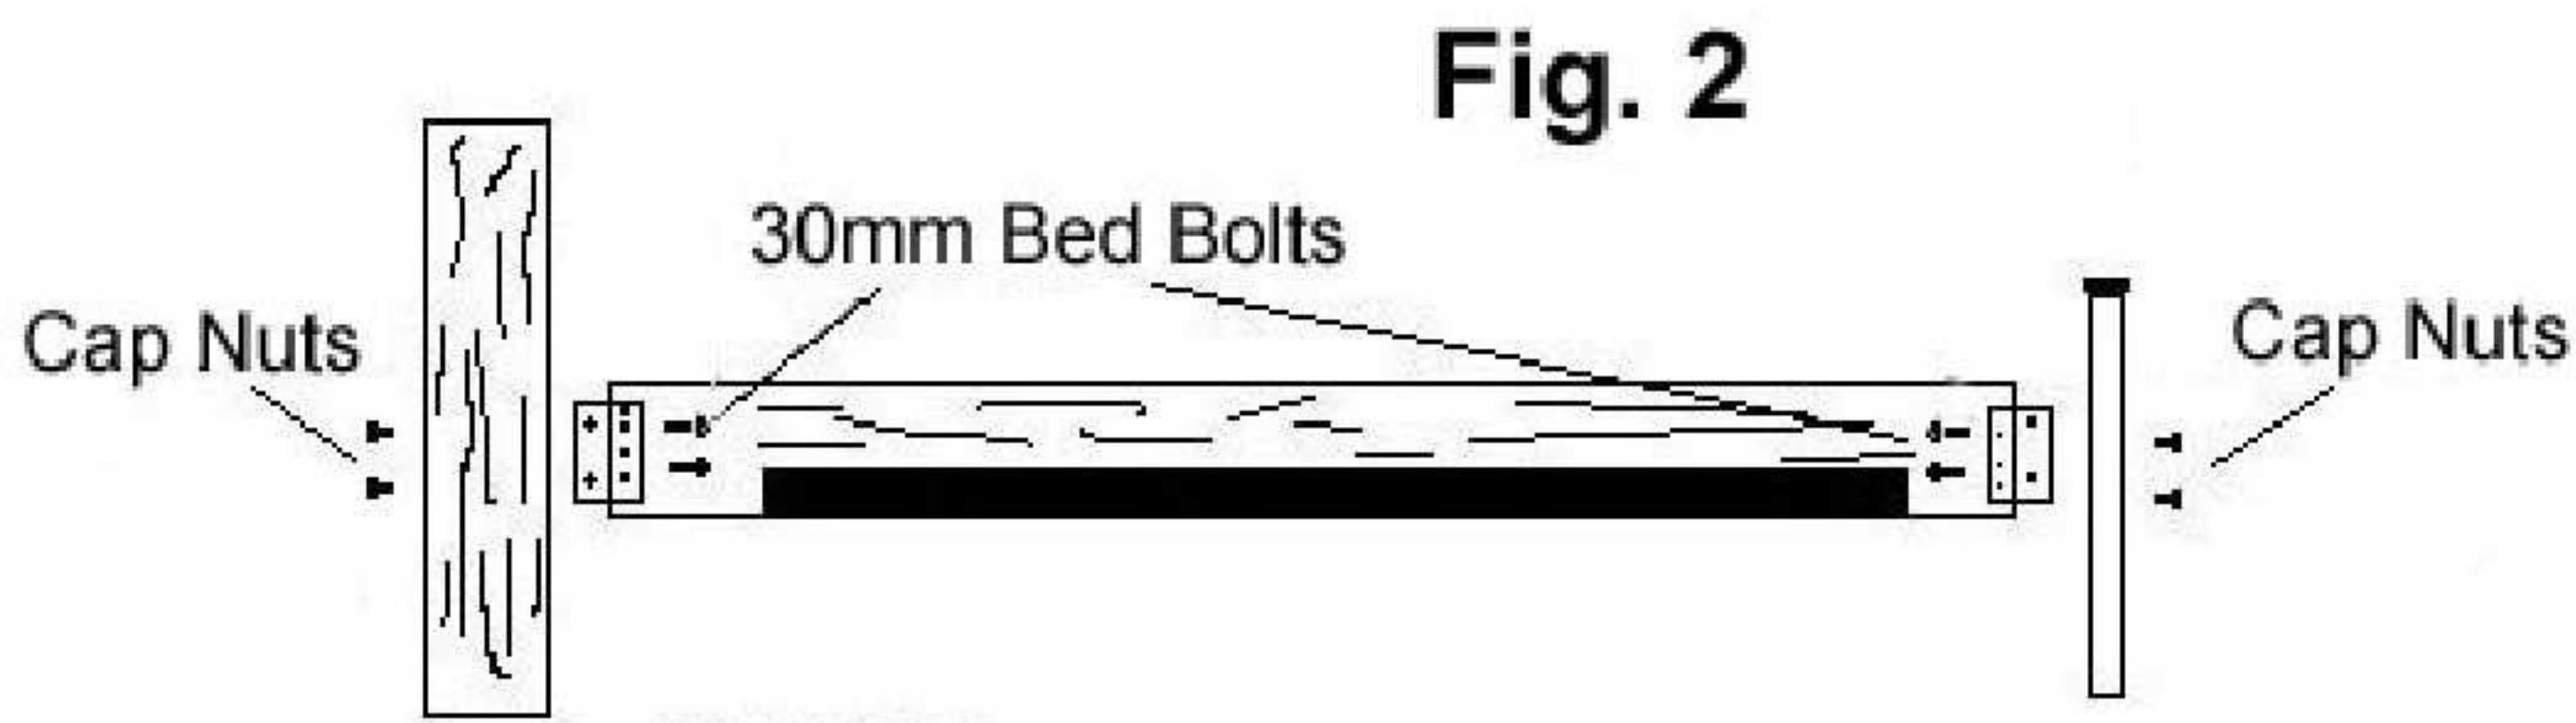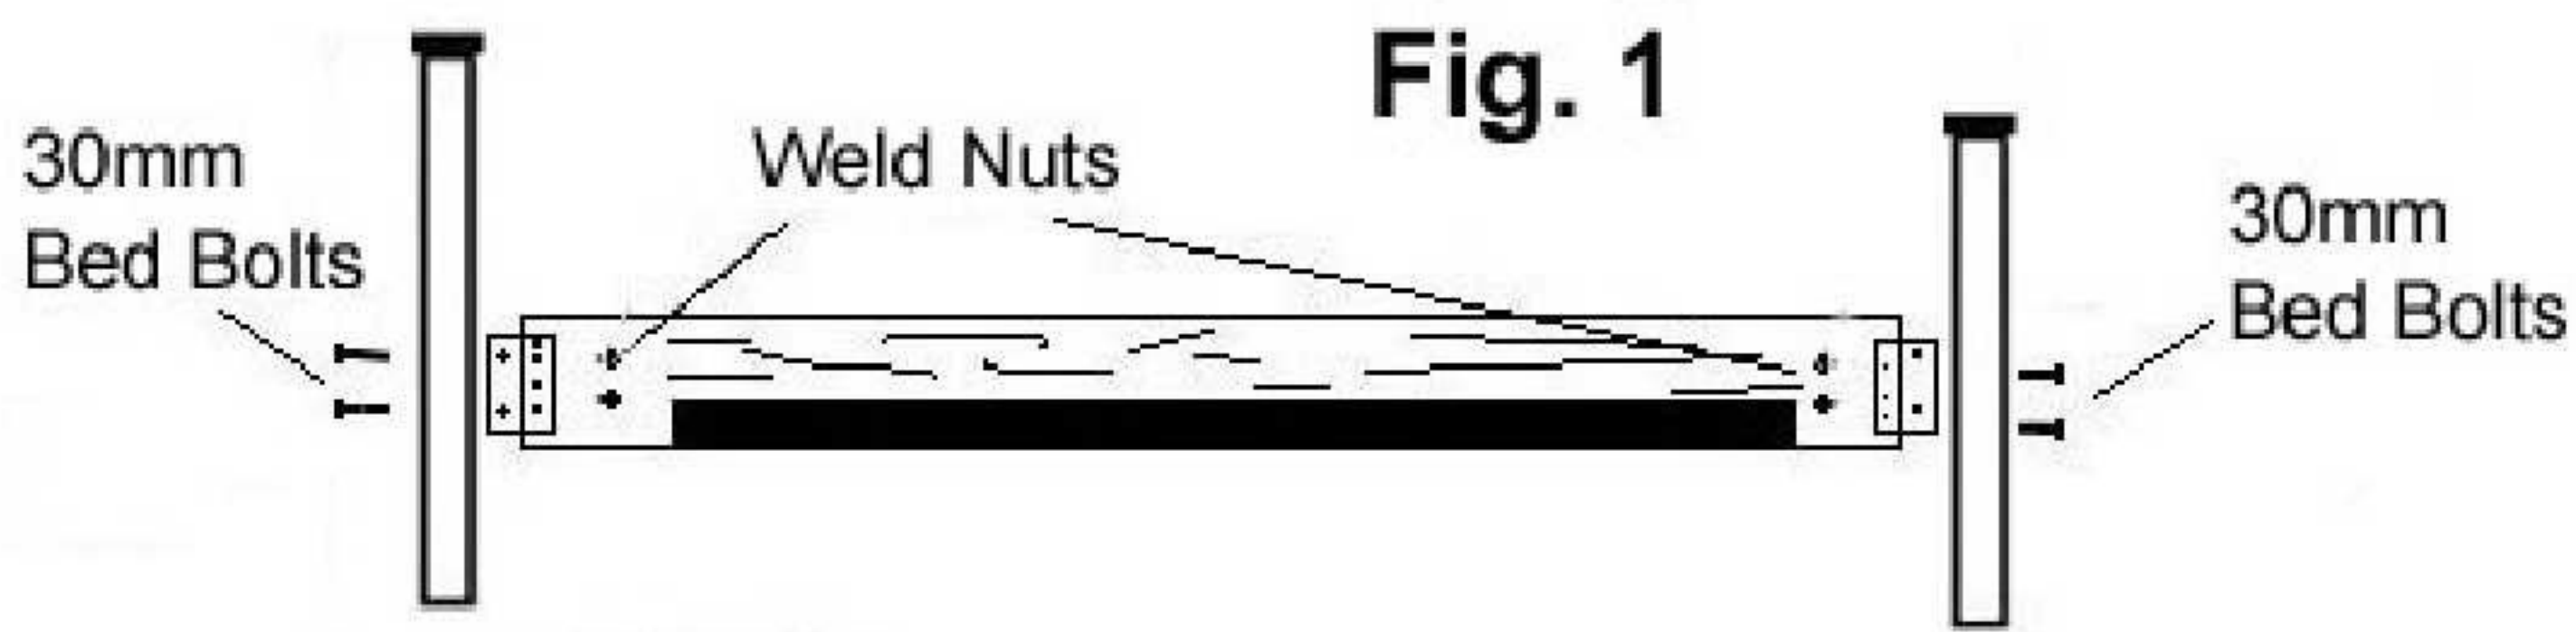

Pine Crafter Furniture  
P.O. Box 1100  
Haleyville, Alabama 35565  
[www.pinecrafter.com](http://www.pinecrafter.com)  
P: 205.486.2153  
F: 205.486.3504