91WD INSTRUCTIONS

BOX CONTAINERS

1 Box Four Door Unit (Hardware: 4 - L-Brackets, $8 - \frac{3}{4}$ " wood screws & 2 - 3" wood screws).

ASSEMBLY INSTRUCTIONS

1. Connect four door unit to headboard and footboard by securing L-Brackets with ¾" wood screws and inserting 3" wood screws through pre-drilled holes, in top of unit, into rails, as shown in Figure 3. Make sure front of unit is flush with front of rail.



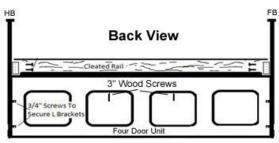


Fig. #1



Pine Crafter Furniture PO Box 1100 Haleyville, AL 35565 P: 205.486.2153 F: 205.486.3504