

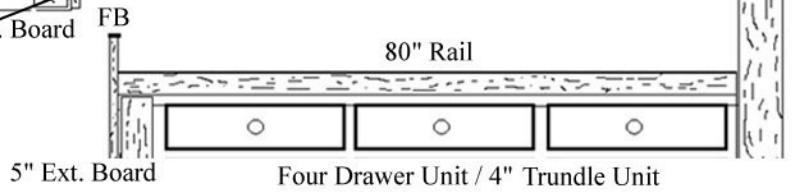


#EX60 and #EX91 Extension Kits


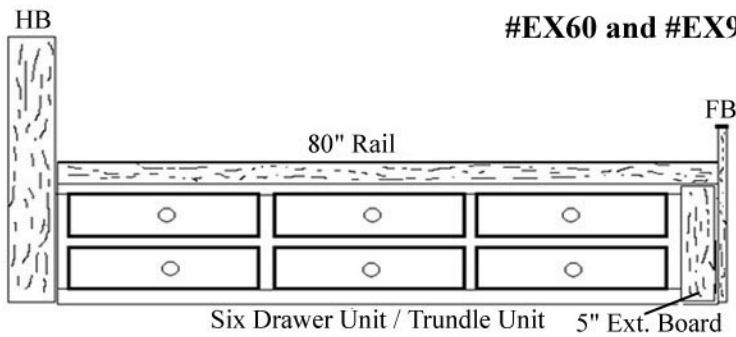


1. Assemble bed with instructions provided with bed.
2. Insert 5" wood board between footboard and drawer unit. Secure with L-Brackets and screws as shown.

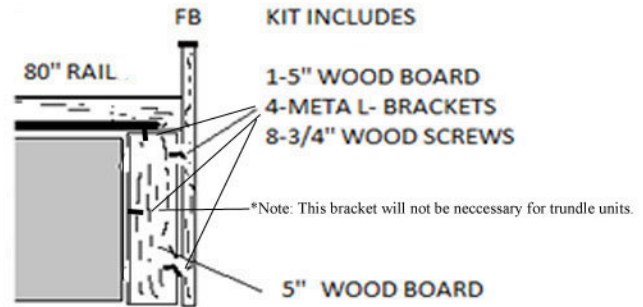


Back of unit shown

#EX60 and #EX91 Extension Kits

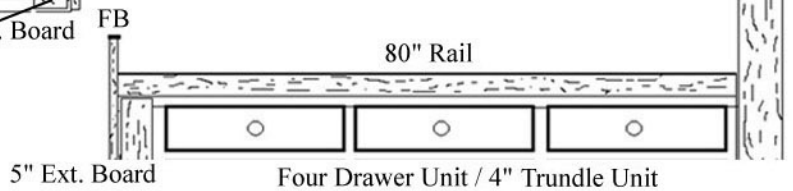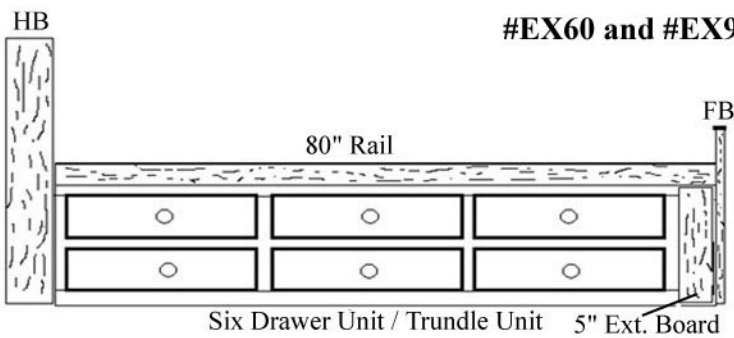

1. Assemble bed with instructions provided with bed.
2. Insert 5" wood board between footboard and drawer unit. Secure with L-Brackets and screws as shown.

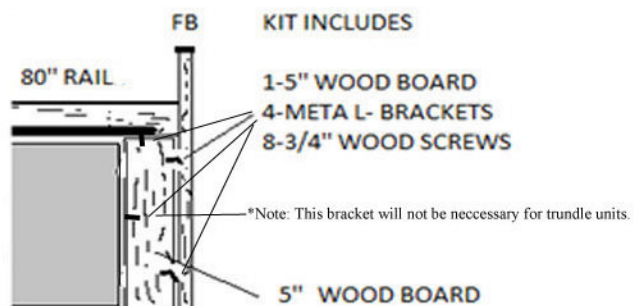

Back of unit shown