


MTNTK

PERFORMANCE

The Can Am Maverick X3 Blow Hole Install Instructions

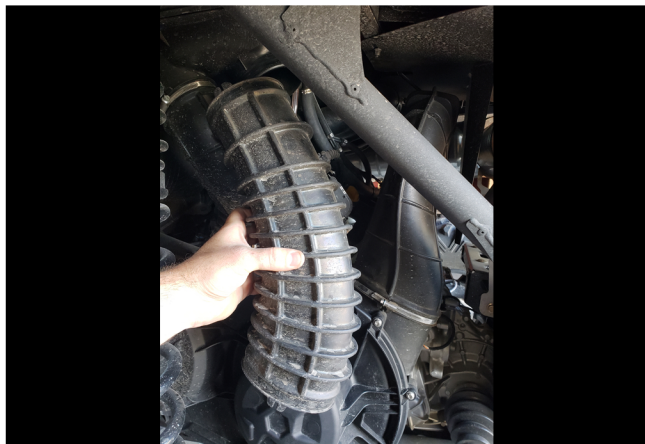

Remove the clutch intake tube by loosening the clamps on both ends of the clutch intake hose. This clutch intake tube will not be used. Keep the clamps for later use.



Install the Blow Hole by slipping the silicone over the clutch cover intake duct first and then slide the top silicone over the upper duct. Once installed, tighten stock clamps as shown.



Route the wiring harness over the cage as shown and proceed to route wire up towards the tail lights. Be sure to route wire so it does not rub or chafe. Use wire ties if needed.



Locate the factory tail light connector and plug Blow Hole directly into the tail light as shown.